

AID Quick Reference

The AID Android App automatically sends an emergency alert when the AID (Select Engineering) active sensor shot recognition panels have been pierced by a bullet, knife, shrapnel, etc.


To operate the AID App:

1. On an Android device that supports Bluetooth v4.0 (Low Energy) – Android O/S must be equal or greater than v4.4 - enter the Google Play store and search for the Automatic Injury Detection app by DataSoft. Install the app and open.
2. In the AID app, select the 3-dot menu icon in the upper right and choose 'Settings'.
3. Add Settings Data:
 - a. Select 'Name' to add the name of the user
 - b. Select 'Front Device' to pair the front panel device with AID*
 - c. Select 'Back Device' to pair the back panel device with AID*




*The list of devices available for pairing will display the AID serial number(s) – compare with the serial number label on the panel to ensure the proper pairing. If your serial number does not appear in the list, open the panel device cover and press the blue reset button.

- d. If you want an emergency alert automatically sent via SMS text message, select 'SMS Number' and enter the desired phone number
- e. If you want AID to automatically make a phone call when the panel has been pierced, select 'Voice Number' and enter the desired phone number

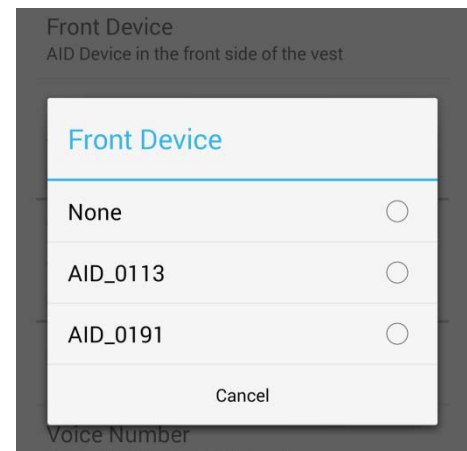

AID AUTOMATIC INJURY DETECTION


- From 'Settings', select the back button to view the connection status (main AID screen). Note the connection and panel section status (e.g. Upper/Lower Chest, Back) and battery level(s).

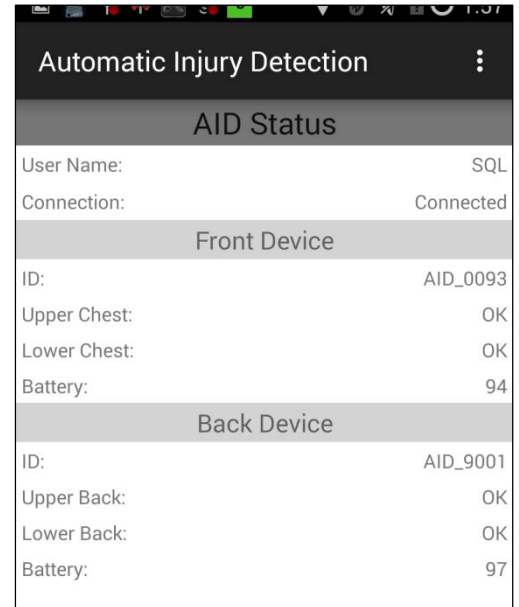

Automatic Injury Detection	
AID Status	
User Name:	SQL
Connection:	Connected
Front Device	
ID:	AID_0093
Upper Chest:	OK
Lower Chest:	OK
Battery:	94
Back Device	
ID:	AID_9001
Upper Back:	OK
Lower Back:	OK
Battery:	97

- If a piercing event occurs (break in continuity) in the AID panel, An 'Injured' message will be displayed, the device will automatically send a text message to the 'SMS Number' as entered and/or a phone call will be made to the 'Voice Number' as entered.

An example of the text message sent from AID is pictured below. Note that the automated message includes a Google Map link with the location of the piercing event.

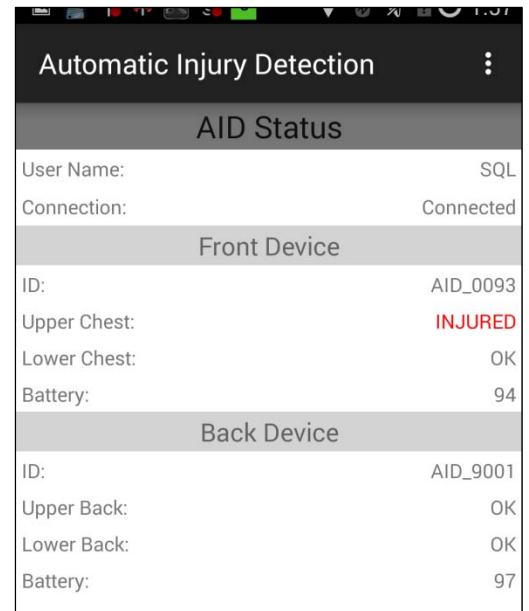

Automatic Injury Detection	
AID Status	
User Name:	SQL
Connection:	Connected
Front Device	
ID:	AID_0093
Upper Chest:	INJURED
Lower Chest:	OK
Battery:	94
Back Device	
ID:	AID_9001
Upper Back:	OK
Lower Back:	OK
Battery:	97

